

## **GETTING START**

### **CHARGING**

This unit comes built in with a rechargeable battery. To charge connect the unit to your computer via USB. Charge the unit in full before first use.

(See battery indicator-on-screen when battery is full)

### **BASIC OPERATION**

To power the unit on, switch the (ON/OFF) switch to (ON).

To power the unit off, switch the (ON/OFF) switch to (OFF).

### **MENU OPERATION**

To access the main menu ,power the unit on and hold the M button for (3) seconds.

Use the | << and >> | buttons to scroll through the menu options.

To select a menu option hit the M button.

To go back to a previous screen in the menu hit the > || button.

### **MODES**

#### **1.) MUSIC**

- This mode will allow you to access and play your MP3 music files.

-To skip forward one song hit the >> | button.

-To skip backward one song hit the | << button.

-To fast forward a song push and hole the >> | button.

-To fast rewind a song push and hole the << | button.

-Volume can be adjusted by hitting the VOL button. Once selected, use the | <<and >> | buttons to turn the Volume up and down. When volume is at the desired level, hit the M button.

-Push the M (mode) button to access the MUSIC mode's sub category.

### **While unit is PAUSED**

**Local Folder** - use this to access your MP3 play's folders and/or music. To scroll through the folders, use the | << and >> | buttons. Once you have selected a song that you want to play, hit the M button.

**Delete File** - use this option to manage a delete your files from your MP3 player. Use the | << and >> | buttons to select "yes" or "no" and the M button to select your option.

**Delete All** - use this option to remove all of the files from your MP3 player. Use the | << and >> | buttons to select "yes" or "no" and the M button to select your option.

**Exit** - select this option and hit the M button to return to the play screen.

### **While unit is PLAYING**

**Repeat** - allows you to choose your repeat functions.

**Equalizer**- use this to change your sound settings. Choose from present options: Natural, Rock, Pop, Classic, soft, Jazz, DBB

**Tempo rate** - use this feature to slow or speed the tempo rate of the current playing song.

**Replay** - this feature to show you to set the duration of a song that you want to play continuously. To start, select this feature. To set the starting point in the song, hit the >> | button. To set ending point, hit the >> | again.

**\*\*Note: you will be selecting these points from the current playing song\*\***

**Replay Times** – this feature will set the amount of times that the replay will cycle before returning to its regular mode. Use the | << and >> | to select from 1-10 and hit the M button to confirm.

**Replay Gap** – this feature will set amount of pause time (in seconds) between each replay. Use the | << and >> | to select from 1-10 and hit the M button to confirm.

## 2.) RECORD

- This mode will allow you to record sounds onto your MP3 device via the internal microphone.
- To start a recording press the > || button. To pause the recording process at any time press the > || button. To resume the recording from where you left off press the > || button again.

### Saving Your Recordings

While recording, press and hold the > || button for 3 seconds. This will stop the recording from the second you pushed the button, save it, and start a new recording.

- OR -

While the unit is paused, press and hold the > || button for 4 seconds. This will automatically save the recording (without confirmation) and start a new recording:

- push the M (mode) button to access the RECORD mode's sub category:

Local Folder – use this to access your MP3 play's folders and/or music. To scroll through the folders, use the | << and >> | buttons. Once you have selected a song that you want to play hit the M button.

Record Type – use this to switch between record types. Use the | << and >> | buttons to scroll between (Fine REC, long REC, fine VOR, and long VOR). When desired type is selected, push the M button to select.

“Fine REC” – High sound quality/Large file size

“Long REC” – Normal sound quality/smaller file size

“Fine VOR” – High sound quality/Unit will only record when a voice or noise is present

“Long VOR” – Normal sound quality/Unit will only record when a voice or noise is present

Exit – select this option and hit the M button to return to the play screen

### 3.) VOICE

- This mode will allow you to play back the recordings that you made in the “RECORD” mode.
- To play back a recording press the >|| button. To skip forward or backward through your recordings press the | << and >> | button
- Push the M (mode) button to access the VOICE mode’s sub category:  
Local folder – use this to access your MP3 play’s folders and/or music. To scroll through the folders, use the | << and >> | buttons. Once you have selected a song that you want to play hit the M button.  
Delete file – use this option to manage and delete your files from MP3 player. Use the | << and >> | buttons to select “yes” or “no” and the M button to select your option.  
Delete all – use this option to remove all of the files from your MP3 player. Use the | << and >> | buttons to select “yes” or “no” and the M button to select your option.  
Exit – select this option and hit the M button to return to the play screen.

### 4.) FM radio

- . This mode will allow you to access FM radio
- . press |<< turn a single step (100KHz) backward
- . press >>| turn a single step (100KHz) forward
- . press M enter radio selection interface: save,record,delete,selete all, auto search, normal band,japan band, exit.  
Record FM Radio:  
press >|| start/pause recording.  
Long press M save the recording in the FM-In directory.
- . press >|| to select saved channel.

### 5.) SYSTEM SETUP

- This mode will allow you to set up and configure all of your system settings.

#### TIME

- This option will allow you to set your date and time on the unit.
- Push the > | button to select the different sections of the month, day, and time. Once the desired section of the display is selected and flashing, use the | << and >> | buttons to change the selection accordingly.

### **SCREEN SAVER SET (SCR SAV SET)**

- This option will allow you to turn a screen saver on or off. Turning the screen saver on will help the battery to hold a charge longer than with the screen saver on.

Screen saver off – select this option if you do not want a screen saver to be display.

Screen saver time – use this option to set the amount of time of the unit will stay idle before displaying the screen saver.

Screen saver select – use this option to select a screen saver. Use the | << and >> | buttons to scroll through the available screen saver. When the desired screen saver is displayed, use the M buttons to confirm.

### **LANGUAGE**

- This option will allow you to change the language that is displayed on the units LCD screen.
- Use the | << and >> | buttons to scroll though the different language options. When the desired language is selected, push the M buttons to confirm.

### **POWER OFF**

#### **OFF TIME**

- This option will set the amount of time that unit will stay idle before turning off.
- Use the | << and >> | buttons to increase or decrease the amount of time (in seconds). When the desired amount or time is selected, push the M button to confirm.

#### **SLEEP TIME**

- This option will set amount of time that unit will stay idle before going into sleep mode.
- Use the | << and >> | buttons to increase or decrease the amount of time (in seconds). When the desired amount of time is selected, push the M button to confirm.

### **REPLAY MODE**

- This option will allow you to change you reply/repeat modes.
- Use the | << and >> | buttons to select between Auto Replay and Manual replay. When the desired option is selected, press the M button to confirm.

### **CONTRAST**

- This option will allow you to adjust the contrast or the display screen.
- Use the | << and >> | buttons adjusts the contrast lower and higher. When the desired contrast has been set, press the M button to confirm.

### **ONLINE MODE**

- Online mode is not compatible with this version MP3 player. The only function option in this mode is “Normal mode”.

### **MEMORY INFO**

- This option will allow you to view the amount of memory that is currently taken up on the unit’s internal memory.